

Tower Models
SC60021T, SC60022T
SC80021T, SC80022T
SC11021T, SC11022T

Parallel Redundancy/Capacity
On-Line UPS
User's Manual



301 Gaddis Boulevard • Dayton, Ohio 45403
U.S. Toll Free 866-261-1191
(937) 253-1191 • Fax: (937) 253-1723
Web site: www.stacoenergy.com

Table of Contents

1.	Important Safety Instruction	2
1.1.	An Important Notice	2
1.2.	Storage Instruction	4
2.	Product Introduction	5
2.1.	General Characteristics	5
2.2.	Symbols on the LCD Display Panel	7
2.3.	Panel explanation	10
2.4.	Communication Port Explanation	13
3.	Installation and Operation	14
3.1.	Unpacking	14
3.2.	Selecting Installation Location	15
3.3.	Installation of Casters Cover	15
3.4.	Terminal Block Explanation	16
3.5.	Operation Test and Installation Instruction	19
4.	Troubleshooting Guide	32
4.1.	Trouble Shooting	32
5.	Bundled Software Installation Guide	34
5.1.	Hardware Installation	34
5.2.	Software Installation	34
6.	Customer Options Slots	35
6.1.	All the below interface cards are with built-in EPO function	35
6.2.	R2E(2nd RS-232) card	35
6.3.	RSE(RS-485) card	35
6.4.	USE(USB) card	36
6.5.	DCE(Dry Contact)-B card	36
6.6.	SNMP Cards	37
6.7.	The Installation of Interface Cards	38
7.	Hot Swappable Battery Replacement	39
8.	Specifications	41

1. Important Safety Instruction

1.1. An Important Notice

1.1.1 For Parallel System installation, please refer to Parallel System Installation Guide Part number 003-2302

1.1.2 Because of “small leakage currents” generated by the EMI filter of the UPS, it is necessary to insure that the UPS is properly grounded before connecting AC power to the input.

1.1.3 To ensure safety in all applications where a UPS is hard wired to the Electrical Supply, ensure that the system is installed by a Qualified Electrical Contractor.

1.1.4 The UPS has its own internal energy source (battery). When the UPS is operating from battery power when no AC input is available, there will be voltage at the output terminals.

1.1.5 Make sure that the AC Utility power source is correctly grounded.

1.1.6 Do not open the case, as there are no serviceable parts inside. Your Warranty will be void.

1.1.7 Do not try to repair the unit yourself; contact your local supplier or your warranty will be void.

1.1.8 Make sure that the rated input voltage of the UPS matches the available AC mains voltage.

1.1.9 Use a certified input power cable with the correct plugs and sockets for the appropriate voltage system.

1.1.10 To eliminate any overheating of the UPS, keep all ventilation openings free from obstruction, and do not store anything on top of the UPS. Keep the UPS 12 inches away from the wall.

1.1.11 Make sure the UPS is installed within the proper environment as specified. (0-40°C and 30-90% non-condensing humidity)

1.1.12 Do not install the UPS in direct sunlight. Your warranty may be void if the batteries fail.

1.1.13 Install the UPS indoors as it is not designed for installation outdoors.

1.1.14 Dusty, corrosive and salty environments can do damage to any UPS.

1.1.15 Install the UPS away from objects that give off excessive heat and areas that are excessively wet.

1.1.16 If liquids are spilled onto the UPS, or foreign objects dropped into the unit, the warranty will be null and void.

1.1.17 The battery will discharge naturally if the system is unused for any length of time.

1.1.18 Recharge the batteries every 2-3 months if unused. If this is not done the warranty will be null and void. When installed and being used, the batteries will be automatically recharged and kept in top condition.

1.1.19 This UPS supports electronic equipment in offices, telecommunications, process control, medical and security applications. This UPS is NOT intended for use in the following application:

- a. Medical equipment directly related to human life
- b. Elevator, Metro (Subway) system or any other equipment related to human safety.
- c. Public system or critical computer systems.

1.1.20 Do not install the UPS in an environment with sparks, smoke or gas.

1.1.21 Make sure the UPS is completely turned off when moving the UPS from one place to another. It might cause electrical shock if the output is not turned off.

1.1.22 The UPS is equipped with a Maintenance Bypass Switch. Please follow the procedures strictly to switch on/off the Maintenance Bypass Switch.

1.1.23 The UPS offers CVCF (Constant Voltage Constant Frequency) setting function.

- a. For correct setting and wiring, please contact your local agent.
- b. Do not attempt to configure the UPS for CVCF by yourself; otherwise your warranty will be void.

1.1.24 This UPS has been designed and constructed to protect your assets from the wide range of power aberrations experienced on Utility power lines today. It is your insurance for reliable, clean and stable voltage supply. It is worth taking care to install the system correctly and to have it maintained correctly by your local dealer.

1.1.25 SAVE THESE INSTRUCTIONS - This Manual Contains Important Instructions that should be Followed during Installation and Maintenance of the UPS and Batteries.

1.1.26 Intended for Installation in a Controlled Environment.

1.1.27 CAUTION – 6Kva - A load disconnect switch shall be provided by others for the AC output circuit. To reduce the risk of fire, connect only to a circuit provided with branch circuit over-current protection for 30 amperes rating in accordance with the National Electric Code, ANSI/NFPA 70.

1.1.28 CAUTION – 8/10Kva - To reduce the risk of fire, connect only to a circuit provided with branch circuit over-current protection for 40 amperes rating in accordance with the National Electric Code, ANSI/NFPA 70.

1.1.29 Use No. 10 AWG, 60°C copper wire and 22.1 lb-in Torque force when connecting to terminal block.

1.2. *Storage Instruction*

For extended storage through moderate climate, the batteries should be charged for 12 hours every 3 months by connecting the UPS input to an appropriate power source and start the UPS according to the instructions in this manual. Repeat this procedure every 2 months under high temperature environment.

2. Product Introduction

2.1. General Characteristics

2.1.1 True online architecture continuously supplies in your critical device with a stable, regulated, transient-free pure sine wave AC Power.

2.1.2 20KHz PWM sine-wave topology yields an excellent overall performance. High crest factor capability of the inverter handles all high-inrush current loads without a need to upgrade the power rating.

2.1.3 Multi-functional LCD/LED panel displays various conditions of the UPS. The LED display shows the UPS working status, Utility Status and UPS Abnormal status. The LCD display shows Input and Output Voltage, Frequency, Load Status, Inner cabinet temperature, and Abnormal conditions.

2.1.4 To protect the unit from overload, it automatically switches to bypass mode in 160 seconds~ 40ms if loading is between 105%~ 150% of rating. At 150% of rating, it switches to bypass mode immediately. The UPS will automatically switch the load back to inverter mode once the overload condition ceases.

2.1.5 If a short circuit is connected to the output the UPS will shut off the output voltage instantly. The output voltage will remain off until the short circuit is removed from the output.

2.1.6 Should the unit become overheated, the internal thermal Switch will detect the heat and switch to bypass mode. When the unit is cooled it will switch the load back to inverter automatically.

2.1.7 Fully digitalized control circuits built into the UPS enhance functionality while providing a high-level of protection of the UPS. Powerful Communication capability enhances its capability for remote control and monitoring.

2.1.8 Maintenance-free sealed-type battery minimizes after-sales service.

2.1.9 Built in maintenance bypass switch provides an easy and safe troubleshooting or maintenance function when the Utility is normal.

2.1.10 Providing four different working modes, such as Normal, ECO, CF50 and CF60, it may widely be used in a variety of applications.

2.1.11 DC-start function allows the UPS to be started during power outages.

2.1.12 Revolutionary battery management circuit analyzes battery discharging status to adjust battery cut-off point and extend the life of batteries.













2.1.13 Intelligent temperature-controlled fan extends the life of the fan and reduces noise.



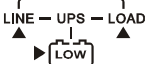






2.1.14 Built in diagnostics use fault codes, displayed on the LCD, to assist in finding the cause of a problem with the unit.

2.1.15 In case the UPS is out of order, Fault status will be shown on the LCD screen.

2.1.16 When the UPS is operated as a frequency converter under CF50 or CF60 mode, the recommended load connected shall be 75% of rated capacity if the input voltage is between 176~280Vac and 50% of the rated capacity if the input voltage is 160~280Vac.

2.2. Symbols on the LCD Display Panel

Item	Symbol	Description
1	LINE	Utility or Bypass Source
2		Battery Low
3		Battery Abnormal
4		UPS Overloading
5		UPS Working in specified mode*
6		A Blackout Transfer occurred in UPS Output
7		Bypass Input Abnormal, UPS fails to transfer to bypass, Bypass Abnormal at ECO mode
8		Utility Input Abnormal
9	OFF	UPS Shutoff
10	LINE OFF	UPS Abnormal Lock
11		UPS Flow Chart
12		4 Digits Measurement Display
13		Indicate the item desired to be measured
14		UPS ON Switch or Alarm Silence
15		UPS OFF Switch


16		Previous Page or Setting Change
17		Next Page
18		Special Function Log in /out
19		Enter or Reconfirmed
20		Utility Input Normal LED
21		Bypass Input Normal LED
22		UPS under Redundancy Mode
23		UPS under ECO Mode
24		UPS Fault or Abnormal Warning LED
25	EPO	Emergency Power Off
26	Er05	Battery Weak or Dead
27	Er06	Output Short Circuit
28	Er10	Inverter Over-current
29	Er11	UPS Overheat
30	Er12	UPS Output Overloading
31	Er14	Fan error
32	Er15	Wrong Procedure to enter Maintenance Mode

33	Er16	Output Parameters Set Error in Parallel System
34	Er17	ID Numbers are in conflict in Parallel System or ID number Error in single unit
35	Er21	Parallel communication error (communication wire disconnected or failure to find ID1 UPS) in parallel system
36	Er24	CVCF mode with Bypass input
37	Er27	The UPS must be operated in normal mode in parallel system
38	Er28	Bypass Overload Time out and cut off output.
39	Er31	The settings of both control board and driver board are not matched each other.
40	Er33	Isolated transformer overheat
41	Er**	Other Error code

The specified modes include Normal mode, ECO mode, CVCF mode, etc..


2.3. Panel explanation

2.3.1 Front Panel Function Explanations

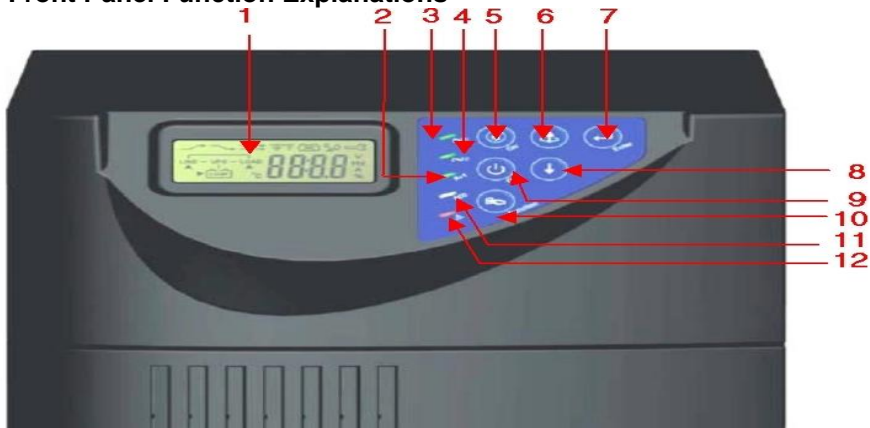

- ① LCD Display
- ② Green LED lights up to indicate the UPS has the capability to run under redundancy mode.
- ③ Green LED steadily lights up to indicate that the Utility input voltage is within the nominal range.
- ④ Green LED lights up to indicate Bypass Input is normal.
- ⑤ UPS ON/Alarm Silence.
- ⑥ Go to previous page or change the setting of the UPS.
- ⑦ To re-confirm the change of UPS Setting.
- ⑧ Go to next page.
- ⑨ UPS OFF Switch.
- ⑩ Special functions log in/out .
- ⑪ UPS is working under ECO(Economic) mode.
- ⑫ UPS Fault or Abnormal .

2.3.2 Rear Panel Explanation

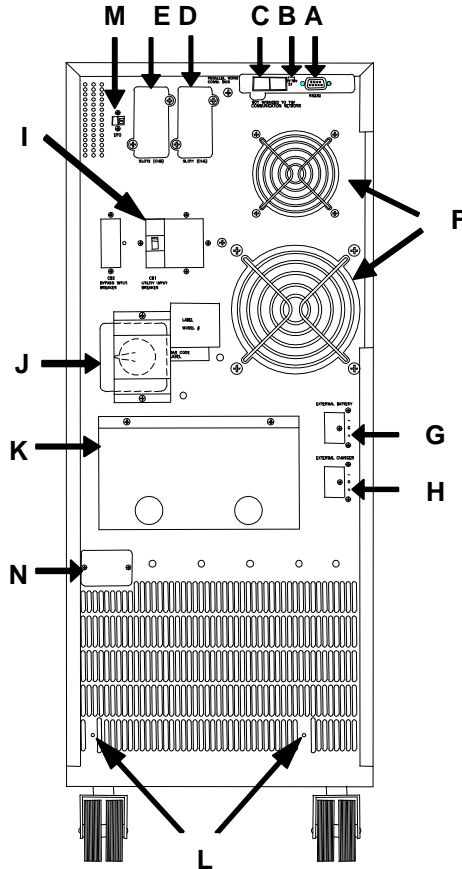

- A RS232 Port
- B Terminal Resistor for Parallel function
- C CAN Bus Connection Port for Parallel System
- D Customer Options Slot 1
- E Customer Options Slot 2
- F Cooling Fan
- G External Battery Connector
- H External Charger Connector
- I Utility Input Breaker CB1
- J CAM Switch(Maintenance Bypass Switch)
- K Input/Output Terminal Block

-
- L Fixing Holes for External Charger Cabinet
 - M EPO (Emergency Power Off) : Short to enable the function
 - N Thermal breaker for protection of load in abnormal conditions: CB3 (8 and 10kVA models only)

OUTPUT						INPUT			
G2	N22	L22	N21	L23	L21	G1	N1	L12	L11
N22, L22, N21, L23, L21 : UPS OUTPUT G2 : OUTPUT EARTH GROUND						L11 : (not connected, used for Dual Input Only) L12-N1 : UTILITY INPUT G1 : INPUT EARTH GROUND			

2.4. Communication Port Explanation

The Communication port on the UPS provides RS232 protocol to communicate with UPS software for remote monitoring.

Available optional interfaces cards, which contains R2E (2nd RS232, SC-RS232), RSE (RS485, SC-RS485), USE (USB, SC-USB), DCE (Dry Contact, SC-Contact/EPO), as well as SNMP card (SC-SNMP1), can be added according to need. However, the R2E card, RSE card and USE card cannot be used simultaneously.

The bundled software of the UPS is compatible with many operating systems such as Windows 98, & 2000, ME, NT and XP. For other applications like Novell, NetWare, Unix, Linux, please contact your local distributor.

When the optional interface cards are used together with the onboard RS232 port, during communication the EPO signals (SC-Contact/EPO) will get the highest priority in control command, then the SNMP/WEB card (SC-SNMP-1), then the shutdown command at the DCE card, R2E, RSE and USE. Finally the onboard RS232 port will get the lowest priority.

2.4.1 RS232


2.4.1.1.1. The RS232 interface settings

The RS232 interface shall be set as follows:

Baud Rate	9600 bps
Data Length	8 bits
Stop Bit	1 bit
Parity	None

2.4.1.1.2. The Pin Assignments of true RS232 type

The Pin Assignments of true RS232 type are illustrated as follows:

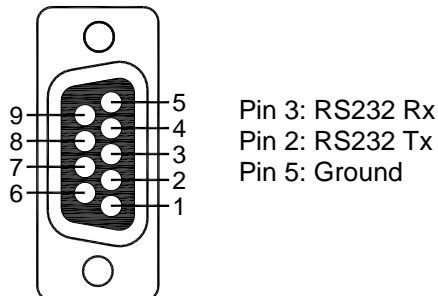

3. Installation and Operation

The packing material and the external condition of the unit should be inspected carefully before installation. Retain the packing material for future use.




3.1. Unpacking

Take the UPS out of the PE foam.

Unwrap the UPS.


Standard Package includes:

- 1 set of User's Manual
- 1 set of UPS communication software with RS232 cable
- 1 set of Metal Accessories Kit as below:



Package for the UPS with Isolation transformer:



- No. 7 wire to be use for terminal block jumpers (included)




3.2. **Selecting Installation Location**

It is necessary to install the unit into the proper environment in order to minimize the possibility of damage and extend the life of the UPS. Please follow the instructions below:

1. Keep at least 12 inches clearance from the rear panel of the UPS to the wall.
2. Do not block the air-flow to the ventilation openings of the unit.
3. Check the installation site to avoid excessive heat and moisture.
4. Do not place the UPS in an environment near dust, corrosive or salty material or flammable objects.
5. Do not install the UPS outdoors.

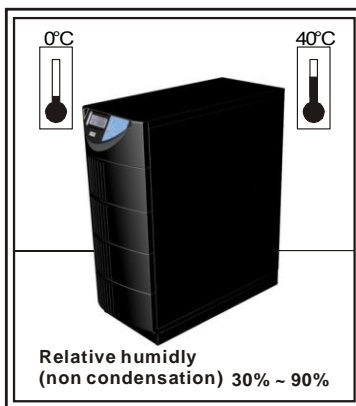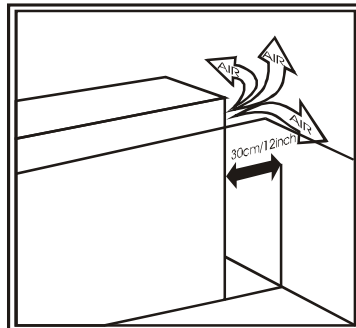

3.3. **Installation of Casters Cover**

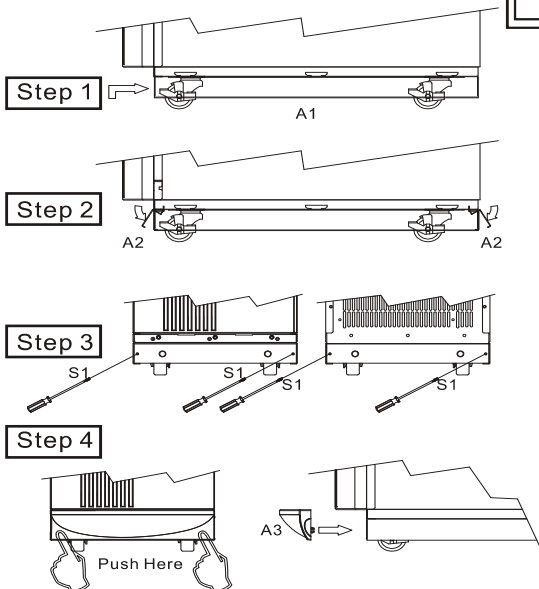

3.4. Terminal Block Explanation

OUTPUT						INPUT			
G2	N22	L22	N21	L23	L21	G1	N1	L12	L11
N22, L22, N21, L23, L21 : UPS OUTPUT G2 : OUTPUT EARTH GROUND						L11 : (not connected, used for Dual Input Only) L12-N1 : UTILITY INPUT G1 : INPUT EARTH GROUND			

- **L11: Not Connected; (L11) Used as bypass input on Dual Input Model (DIM) units only. (Models SCxxx21T and SCxxx22T are NOT DIM)**
- **L12-N1: Utility Input power when the UPS is running in Utility mode. Also provides bypass on Models SCxxx21T and SCxxx22T.**
- **G1: UPS Input Ground.**
- **L21, L23, N21, L22, N22: UPS Output.**
- **G2: UPS Output Ground.**

Remarks:


Input Connection

1. Connect the utility AC source to UPS from L12-N1 terminal.


Output Connection(s)

2. When an Isolation transformer is NOT installed, the UPS output terminals will be L22-N22 (Models SCxxx22T). **Output voltages for these models are selectable from 200, 208, 220, 230, and 240Vac.**
3. When the Isolation transformer is installed (Models SCxxx21T): **Output voltage on the front panel display represents “Inverter” output, which is the input to the isolation transformer, not the UPS output.**
 - a. For 120V/120Vac system (2 branches of 120V, each at ½ total rated kVA)


L22-N22	120V
L21-N21	120V




- b. For 120Vac system (1 branch of 120V at full rated kVA)
 Jumper L22-L21 and N22-N21
 L22-N22 120V




- c. For 240/120Vac system (2 branches of 120V, 1 branch of 240V)
 Jumper L22-N21
 L22-N22 120V
 L21-N21 120V
 L21-N22 240V




- d. For 240Vac system (1 branch of 240V at full rated kVA)
 Jumper L22-N21
 L21-N22 240V



- e. For 208V/120Vac system (2 branches of 120V, 1 branch of 208V)
 Jumper L22-N21
 L22-N22 120V
 L21-N21 120V
 L23-N22 208V




- f. For 208Vac system (1 branch of 208V at full rated kVA)
 Jumper L22-N21
 L23-N22 208V



NOTE: For models with an isolation transformer, the output is configurable to 100V, 110V, and 115V systems by choice of inverter output settings (section 3.5.1.23) and internal connection of isolation transformer. Consult the factory if voltage other than 120V, 208V, or 240V is necessary.

- **Use Mounting Cable Tie to attach cables.**

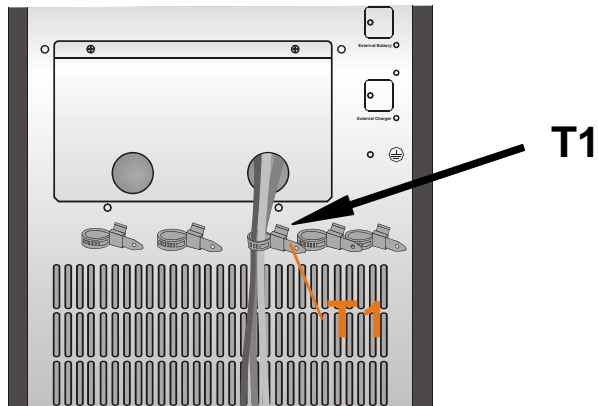

4. Power connections must be made using the following tables for the input current, output current and recommended conductors:

a. AC input and output

Model	*Maximum Current	Conductor Size
6KVA	33A	AWG #9
8KVA	54.3A	AWG #7
10KVA	54.3A	AWG #7

*- Maximum current shown is the rating of the recommended conductor


b. External battery input

Model	Maximum Current	Conductor Size
6KVA	25A	AWG #10
8KVA	41A	AWG #10
10KVA	41A	AWG #10


3.5. Operation Test and Installation Instruction

Start Up in Normal Mode


- 3.5.1.1. Open the terminal block cover on the rear panel. Before installation make sure the unit is properly grounded.
- 3.5.1.2. Make sure Utility breaker, UPS' Utility breaker and Bypass breaker are in the "Off" position.
- 3.5.1.3. Make sure the utility voltage matches the input voltage rating of the UPS.
- 3.5.1.4. Connect the utility input and load to the terminal blocks according to the instructions in section 3.4. Apply power to the UPS and switch on the breakers of the UPS Inputs. The UPS starts up and Green LEDs \sim^1 & \sim^2 light up to show the Utility and Bypass Inputs are normal and the LCD display with parallel function will display as shown in drawing A1, drawing A2 then drawing B. Otherwise the LCD display will show as in drawing A2 to drawing B.

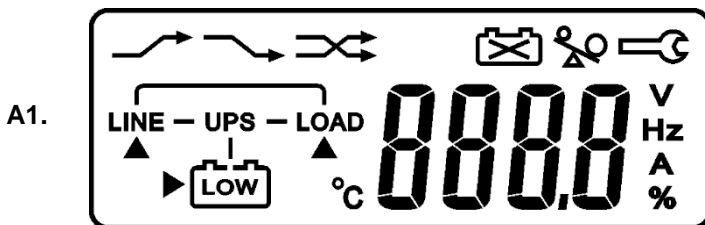


B.

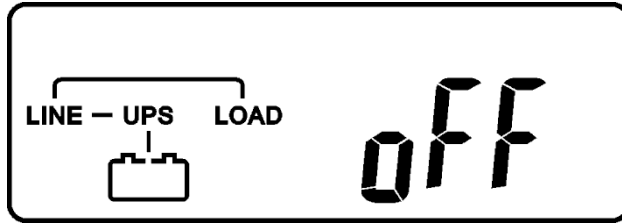

3.5.1.5. The UPS is now in Bypass Mode and it will proceed to self-test automatically. If there are no abnormal messages then the self-test was successful and the charger starts to charge the batteries.


3.5.1.6. Press the UPS On Switch  for approx. 3 seconds, then the alarm sounds twice and the LCD display changes from drawing B to drawing C.

C

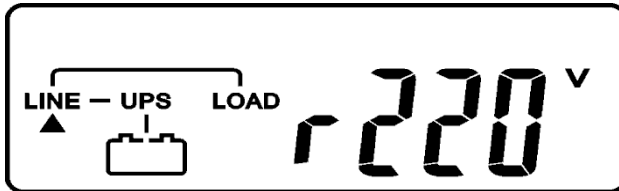

3.5.1.7. The UPS performs another self-test and the LCD display will change from drawing C to drawing D, running in battery mode for approx. 4 seconds, then the display will change from drawing E1 to drawing F if the self-test is successful.

D

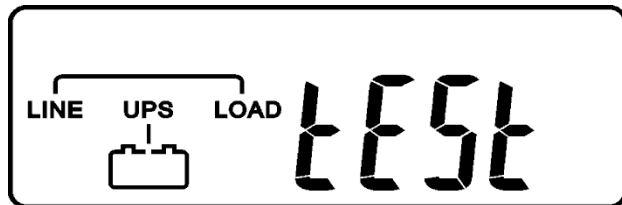


* Display shows "test".

E1




* Display shows "OK" in self-test

E2

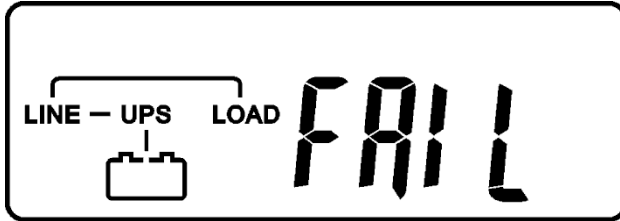

* Display shows "Fail" in self-test

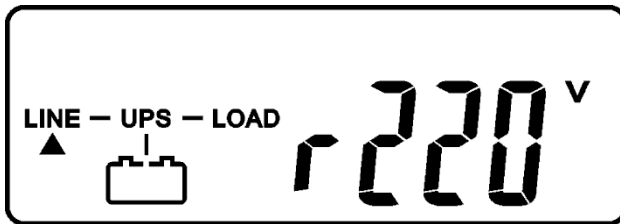

F




* Display shows "220Vac" in Utility Input.


- 3.5.1.8. If the UPS should fail self-test, the LCD display will change from Drawing D to drawing E2, then an error code or error status (section 2.2) will be shown on the screen.
- 3.5.1.9. Start-up operation of the UPS is now complete. Make sure the UPS is connected to the utility for charging at least 8 hours and the batteries are fully charged.

Start-up in Battery Mode (Cold Start)


- 3.5.1.10. Make sure the UPS has a fully charged battery pack. At least 1 set (20pcs) of 12V/7AH batteries is required.
- 3.5.1.11. Push the UPS On Switch  once for approx. 5 seconds to initialize the UPS. The alarm sounds twice. The LCD display will change from drawing A1 to drawing G, and stay on for approx. 15 seconds.
- 3.5.1.12. Within 15 seconds, press the UPS On Switch  again for about 3 seconds, until the LCD display changes from drawing G to drawing H, then the UPS will be in self-test Mode. The UPS will start the inverter to energize the output in approx. one minute, and the LCD display will show as drawing I. Failure to press the UPS On Switch within 15 seconds, will cause a failure to start and you will then have to repeat steps 3.5.1.10 to 3.5.1.12 once again.
- 3.5.1.13.

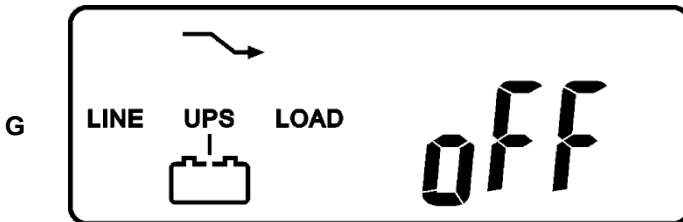

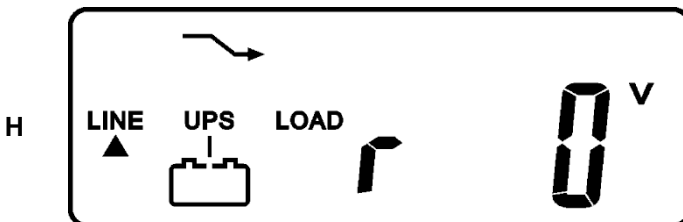

- Display shows "Off", which means the UPS pre-start is successful.

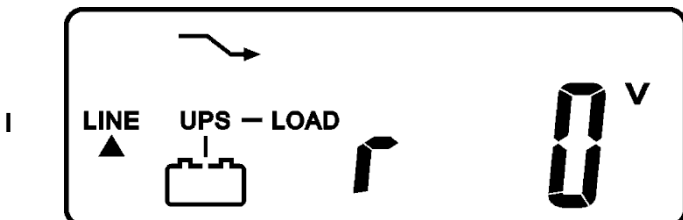


- * Display shows Utility input is "0" and Utility Abnormal.




Check Measured operating parameters detected by the UPS


3.5.1.14. If you would like to check the operating parameters of the UPS, use the scroll down  and scroll up  key pads. When you use the scroll down key pad, the LCD display will show as in Drawing C(Voltage from Utility Input) → Drawing I1(Voltage from Bypass Input) → Drawing J(Frequency from Utility Input) → Drawing K(Frequency from Bypass Input) → Drawing L(Inverter Output Voltage, for units without isolation transformer this is also the “UPS” Output) → Drawing M(UPS Output Frequency) → Drawing N(UPS Output Load %) → Drawing O(UPS Battery Voltage) → Drawing P(UPS Inner Temperature).

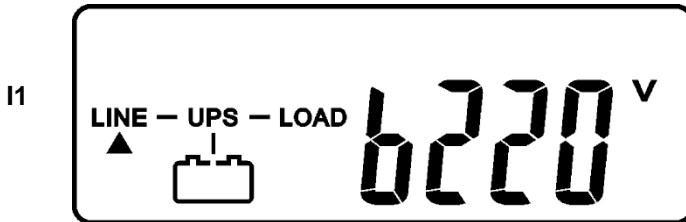


* Display shows voltage at the Bypass Input

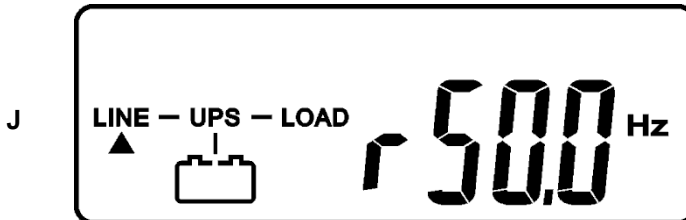


* Display shows frequency from the Utility Input.

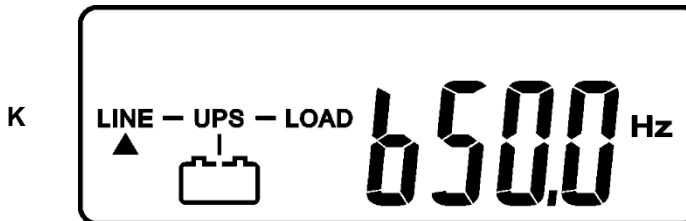


* Display shows frequency from the Bypass Input.

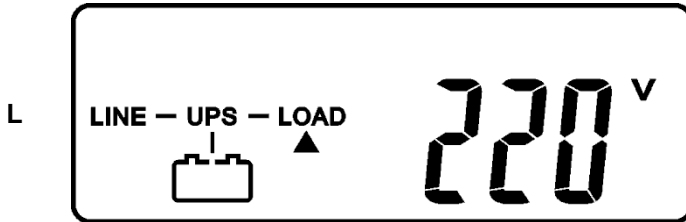


* Display shows the Inverter output Voltage.

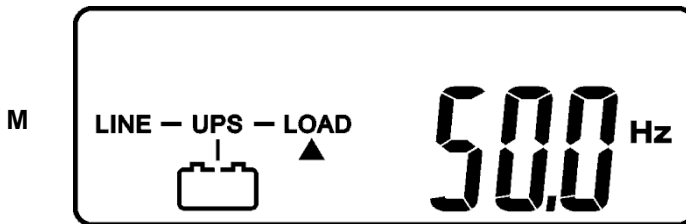


* Display shows the UPS output frequency.

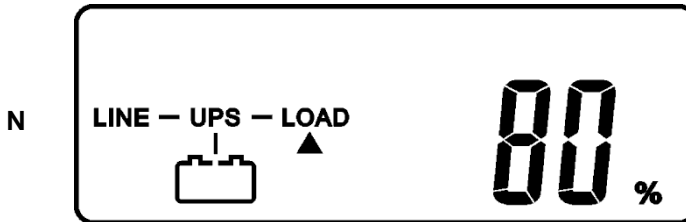

* Display shows the UPS output load level(%)

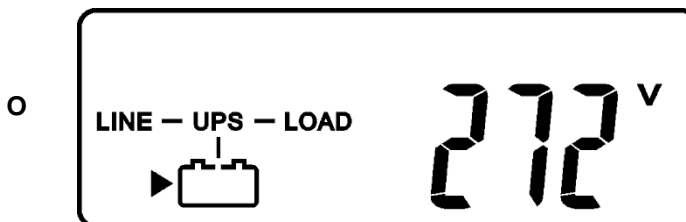


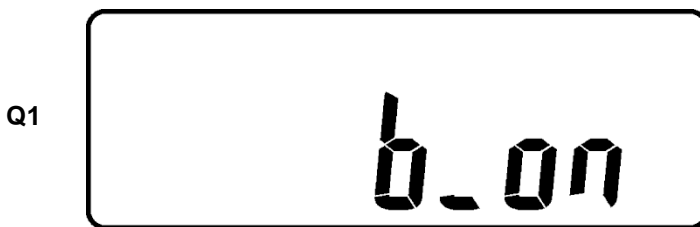
* Display shows the Battery Voltage.

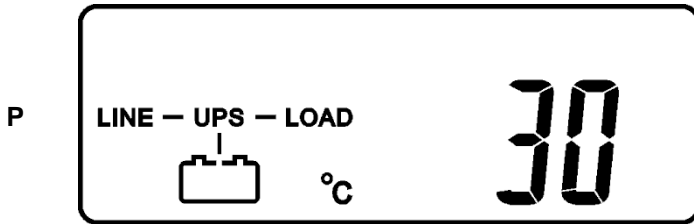

* Display shows the UPS Inner Temperature

UPS Default Data and Special Function Execution


3.5.1.15. After the UPS completely starts up, press  key pad to change the LCD display screen to drawing Q1.



* Display shows alarm (b for buzzer) "On".



* Display shows alarm (b for buzzer) "Off".


3.5.1.16. Press  key pad to scroll through the screens to check the UPS settings. The LCD display will change, in sequence, from Drawing Q1(alarm/buzzer) → Drawing R1(Self-test) →Drawing S1(Bypass Voltage Windows) → Drawing T(Output Frequency Synchronization Window) →Drawing U(Inverter Output Voltage) →Drawing V1(UPS Operation Mode) →Drawing W(Output Voltage Micro Tune Value) →Drawing X(UPS Id) →Drawing Y(Parallel function status).

R1




* Display shows self-test is NOT "on".

R2

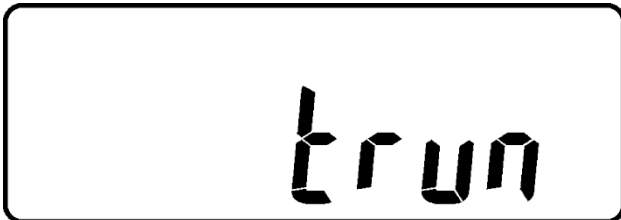

* Display shows self-test is "On".

S1

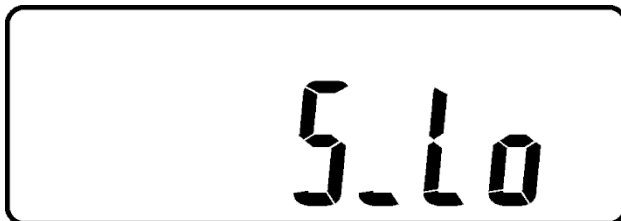


* Display shows Bypass Voltage window is adjusted to narrow range.

S2



* Display shows bypass voltage window is adjusted to wider range.

T

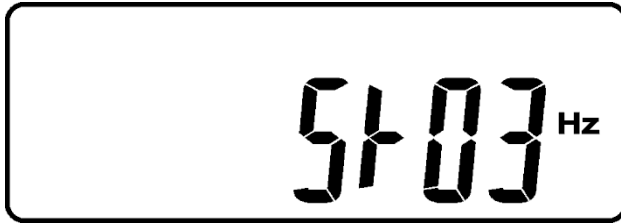

* Display shows Frequency Window is +/-3Hz.

U




* Display shows inverter output voltage.

V1




* Display shows the UPS is operating in "normal mode".

V2

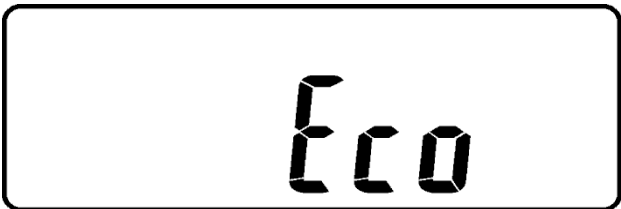


* Display shows the UPS is operating in "Eco mode".

V3

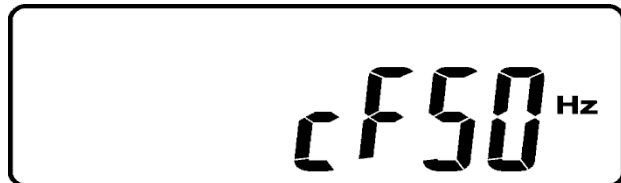

* Display shows the UPS is operating in "CVCF 50Hz mode".

V4

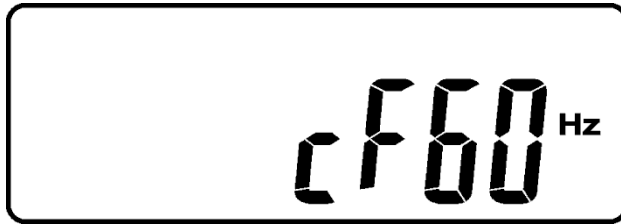

* Display shows the UPS is operating in "CVCF 60Hz mode".

W




* Display shows Output Voltage Adjustment % from 0% to 3% or -0% to -3%.

X




* Display shows UPS Identification Number.

Y

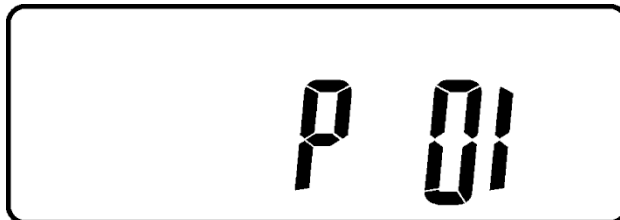






* Display shows the UPS is in position No. 1 in a parallel system.

3.5.1.17. Press scroll up  key pad to execute special functions. The Functions include alarm/buzzer ON (as drawing Q1), or alarm/buzzer OFF (as drawing Q2, Alarm silence for UPS Warning) and self-test OFF (As drawing R1) or self-test ON (as drawing R2). The UPS will execute a battery test for 10 seconds. If the self-test is successful, it will show as

Drawing E1; otherwise, it will show as drawing E2 and an error message will appear at the same time.)

UPS Default Settings and their alternatives

- 3.5.1.18. Make sure the UPS is OFF (with utility breaker ON). Press the ON Switch  and scroll down  key pads simultaneously for approx. 3 seconds, the alarm will sound twice, the LCD display screen shows as drawing Q1. The UPS is now in settings mode.
- 3.5.1.19. To scroll down the LCD screen, refer to Chapter 3.5.1.16
- 3.5.1.20. With the exception of the alarm/buzzer(as drawing Q1 & Q2) and Self-test(as drawings R1 & R2), all of the other default settings may be changed by pressing the scroll up  key pad.
- 3.5.1.21. Drawings S1 and S2 show the acceptable range for bypass input. It can be 184Vac~260Vac (S2) or 195Vac~260Vac (S1).
- 3.5.1.22. Drawing T shows the bypass frequency window of the Inverter Output. The acceptable setting values are $\pm 3\text{Hz}$ and $\pm 1\text{Hz}$.
- 3.5.1.23. Drawing U shows the acceptable Inverter Output Voltages as 200Vac, 208Vac, 220Vac, 230Vac, or 240Vac.
- 3.5.1.24. Drawing V1, V2, V3 and V4 show the operating modes of the UPS. Alternatives are Normal, Eco(Economic) mode, fixed 50Hz Output or fixed 60Hz Output.
- 3.5.1.25. Drawing W shows the setting of the Inverter Output, which can be calibrated as 0%, +1%, -1%, +2%, -2%, +3%, or -3%.
- 3.5.1.26. Drawing X shows a specified address and position of the UPS when the UPS is in Parallel mode. The settable position numbers are from 1st to 4th. The number must be 1st if the UPS is not in parallel.
- 3.5.1.27. Drawing Y shows the parallel function status. The "P 01" means parallel function disabled and the "P 02" means parallel function enabled.
- 3.5.1.28. When all of the setting changes are complete, you have to press the enter  key to save all the changes when the LCD screen shows as drawing Z, then the LCD screen will show as drawing AA to complete the setting changes. If you don't want to change the settings, press the "OFF"  key for 5 seconds, then the LCD screen turns to Drawing AA directly, which means your setting changes are ignored.

Z



* Press the Enter key to save data.

AA







* Display shows the UPS is locked.

3.5.1.29. Turn Off the utility power to the UPS input.

3.5.1.30. Your Settings changes are complete.

UPS Is Off Due to Unknown Reason and Requires Trouble Shooting


3.5.1.31. If a serious abnormal condition has occurred, the UPS will lock it itself in the “OFF” position as shown in drawing AA, and a abnormal message will show on the LCD screen.

3.5.1.32. After 3 seconds, all messages will be locked except Bypass messages(LED  & LCD ). In case the Utility is abnormal after the UPS is locked, the LED  will be extinguished and the LCD  will be shown on the LCD screen.

3.5.1.33. To release the UPS lock, proceed as follows:

3.5.1.33.1. Check the error messages recorded.


3.5.1.33.2. Refer to Chapter 2.2 to trouble shoot the problem. Otherwise, consult your local distributor for service.

3.5.1.33.3. Press Off  key pad for 5 seconds and the alarm will sound twice.

3.5.1.33.4. Turn Off the Utility Input.

3.5.1.33.5. The UPS lock has been reset, but you will still need to contact your Local distributor to make sure the error message shown is solved.

Shut Off

3.5.1.34. Press Off  key pad for about 5 seconds, the Inverter output will be turned off and the output load is now supplied by the Bypass, and the LCD screen shows as drawing B.



3.5.1.35. Turn Off the Utility and Bypass Input.

3.5.1.36. The UPS is turned off completely.

Maintenance Bypass Mode

3.5.1.37. Maintenance Bypass Mode is intended for UPS maintenance only. The following procedure must be performed by an authorized, trained service technician. If there is any damage caused by failure to follow this

procedure or unauthorized use of the Maintenance Bypass Mode, your warranty will be void.

- 3.5.1.38. Press the Off  key pad for approx. 5 seconds, the LCD screen shows as drawing B and the UPS output is in bypass mode.
- 3.5.1.39. Release the cover of the CAM Switch(Maintenance Bypass Switch) first, then turn the CAM Switch to “Bypass” mode, and verify that the right-hand upper Corner of the LCD screen shows .
- 3.5.1.40. Turn off the Utility and Bypass Input to the UPS. You can now proceed with UPS maintenance.
- 3.5.1.41. To return the UPS to normal operating mode, turn off the Utility and Bypass Input to the UPS. Set the CAM switch to “INV” mode. Fasten the cover back into position and repeat 3.5.1.5 to 3.5.1.89. The UPS will switch back to inverter mode.
- 3.5.1.42. CAUTION: It is required to go through 3.5.1.38 first, then go through 3.5.1.39 If you skip 3.5.1.38, the UPS will alert for 10 seconds to warn that the procedure is abnormal, which may damage the UPS due to uncertain utility status. The UPS will switch back to Inverter mode immediately if you turn the CAM switch back to “INV”.




4. Troubleshooting Guide

4.1. Trouble Shooting

When the UPS malfunctions during operation, you may check the following:

- a. Is the input and output power wiring correct?
- b. Is the Utility voltage within the input window of the UPS?

In case problems or symptoms still exist, refer to the following tables. Should the problem persist, contact your local distributor for help.

Situation	Check Items	Solution
UPS Red Fault LED lights up	Check the error code shown on the LCD screen 1. Er05,  &  2. Er06, Er10, Er12, Er28, &  3. EPO 4. Er11, Er33 5. Er14 6. Er15 7. Er16, Er27 8. Er21 9. Er24 10. other error code	1. Check to see if the battery connection is properly done, then re-charge the batteries for 8 hours to see whether the UPS will backup normally; otherwise, consult your local distributor right away. 2. Remove the short circuit at the EPO terminal. 3. Remove any objects blocking the ventilation holes. 4. Verify the cooling fans on the rear panel are working normally. 5. Make sure the UPS is operated normally. If it is on CVCF mode, you have to turn off and turn on the UPS again. 6. All parameters except ID Numbers in parallel units must be same. Please refer chapter 3.5 to set them again. 7. Reconnect the RJ-45 wire or set a UPS with ID=1. 8. When the UPS is on CVCF mode, it is prohibited to have a bypass input. You have to turn off the UPS and bypass input and re-start the UPS. 9. Consult your local distributor for help.
UPS has no output and no error codes or faults are present.	Check CB3	If CB3 is tripped, turn off the UPS completely and keep the Bypass switch at position INV before pressing CB3. Then remove some uncritical load at the UPS output end. If there is any damage to the AC power cord, replace it.
UPS fails to offer battery backup or its back up time is shorter than specified.		If the backup time is still too short after 8 hours of charge, please contact your local distributor for battery replacement.
UPS locks itself and it can not be turned off.		Please refer to chapter 3.5.1.31 to trouble shoot the problem; otherwise, consult your local distributor for help.

5. Bundled Software Installation Guide

5.1. Hardware Installation

1. Connect the male connector of the RS232 cable to the UPS communication port.
2. Connect the female connector of the RS232 cable to a dedicated RS232 port of the computer.
3. For optional interface cards, refer to Section 6 for installation.


5.2. Software Installation

Please refer to the user's manual of the software for installation. The manual is located on the CD contained in the package.

6. Customer Options Slots

6.1. All the below interface cards are with built-in EPO function.

The pin assignments of the EPO are:



1 → EPO+
2 → Ground

To enable the EPO function, please short Pin 1 & 2.

6.2. R2E (2nd RS-232, P/N SC-RS232)

CN1 is for RS232 DB9 and CN3 is for EPO.
For communication protocol, please refer to Chapter 2.4

Installation Position: slot1(CHA-CN4) or slot 2(CHB-CN5).

Adapted flat cable: cable A or cable B
For installation, please refer to Chapter 0




6.3. RSE (RS-485, P/N SC-RS485)

CN1 allows the terminal resistor to function. Short pin1-2 to enable the function and short pin 2-3 to disable it.


CN2 for RS485 and CN3 for remote power.

Definition

For communication protocol, please see the definition below:




1 → Ground
2 → A/Data+
3 → B/Data-



1 → AC+
2 → A C-

Installation Position: slot 1 or slot 2.


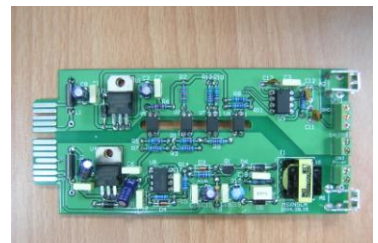


6.4. USE (USB, P/N SC-USB)

CN1 for USB.

Definition

- 6.4.1.1.1. Comply with USB version 1.0, 1.5Mbps
- 6.4.1.1.2. Comply with USB HID Version 1.0.
- 6.4.1.1.3. The Pin Assignments of the USE card:

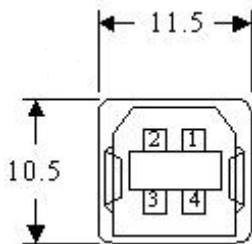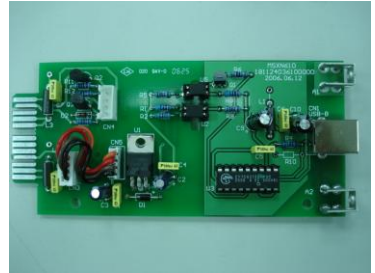

- 1 → VCC (+5V)
- 2 → D -
- 3 → D +
- 4 → Ground

Installation Position: slot1 (CHA-CN3) or slot 2 (CHB-CN4) .

6.5. DCE (Dry Contact)-B card (P/N SC-Contact/EPO)

The pin assignments of 10-Pin Terminal:

1	2	3	4	5	6	7	8	9	10
---	---	---	---	---	---	---	---	---	----

- Pin 1: UPS on Bypass mode.
- Pin 2: Utility Normal (Normal close contact)
- Pin 3: Utility Normal (Normal open contact)
- Pin 4: Inverter On
- Pin 5: Battery Low
- Pin 6: Battery Bad or Abnormal
- Pin 7: UPS Alarm
- Pin 8: Common
- Pin 9: Shutdown UPS positive(+) signal
- Pin 10: Shutdown UPS positive(-) signal



The shutdown function will be activated, after a +6~+25Vdc is connected between pin 9 and pin10 for 5 seconds.

The capacity of each relay contact is 40Vdc/25mA.

Installation Position: slot1(CHA-CN7) or slot 2(CHB-CN8).

Flexible signal output for N.C.(Normally closed) or N.O.(Normally open) contact by shorting pin1-2 or pin 2-3 from JP1-5.

The shutdown function will be enabled in 1 minute after blackout occurs if the pin1-2 of both CN1 and CN6 be shorted by a jumper. Or, the shutdown function can only be enabled by pin 9-10 of CN3 if pin 2-3 of both CN1and CN6 are shorted by a jumper.

6.6. **SNMP Cards**

SNMP/WEB card

- 6.6.1.1.1. For installation, please refer to the user's manual attached with the card. .
- 6.6.1.1.2. Installation
- 6.6.1.1.3. Position: slot 2(CHB).



Net Agent II Internal Card (P/N SC-SNMP1)

- 6.6.1.1.4. For installation, please refer to the user's manual attached with the card.
- 6.6.1.1.5. Installation
- 6.6.1.1.6. Position: slot 2(CHB).



6.7. *Installation of the Interface Cards*

1



2




3




7. Hot Swappable Battery Replacement


1. Unscrew the bottom of the front panel as indicated below.
2. Remove the front panel as indicated.

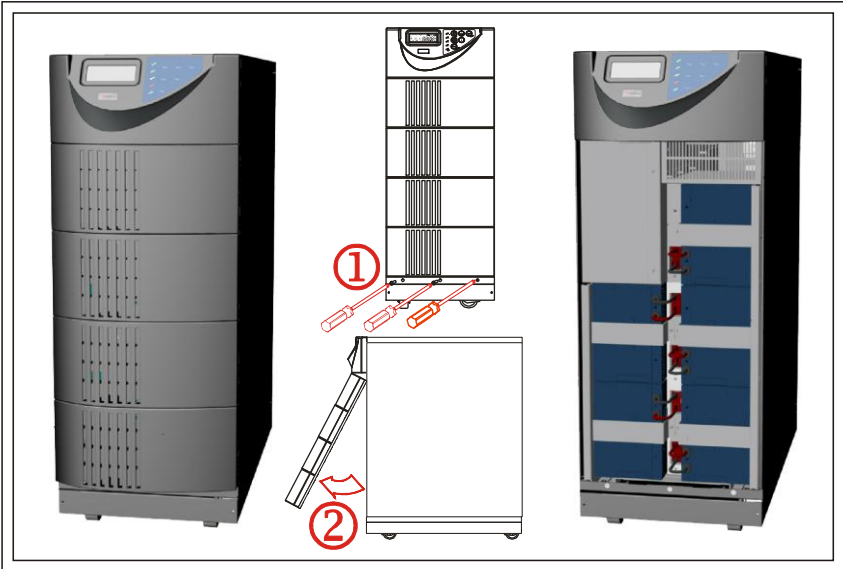

3. Remove the screw of the battery pack fastener as shown.
4. Remove the fastener as shown.
5. Unplug the hot swappable battery connectors as shown.

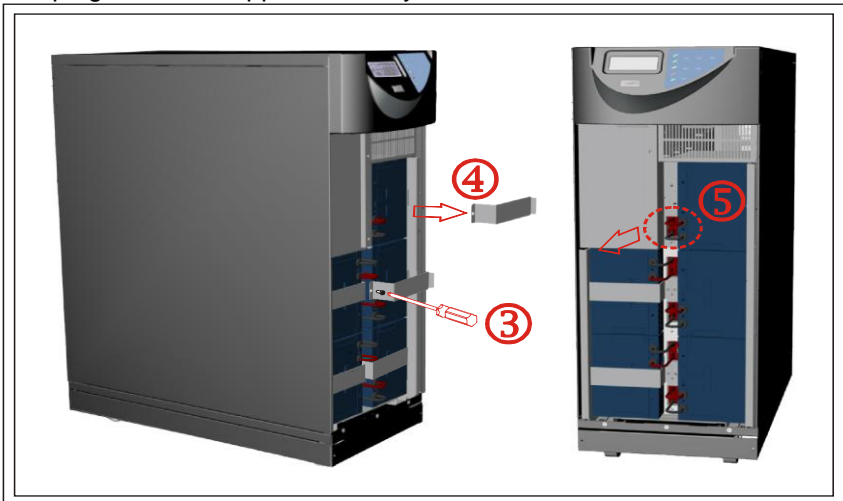

6. Turn the battery pack handle at 90 degree as shown.
7. Remove the battery packs from the UPS as shown.

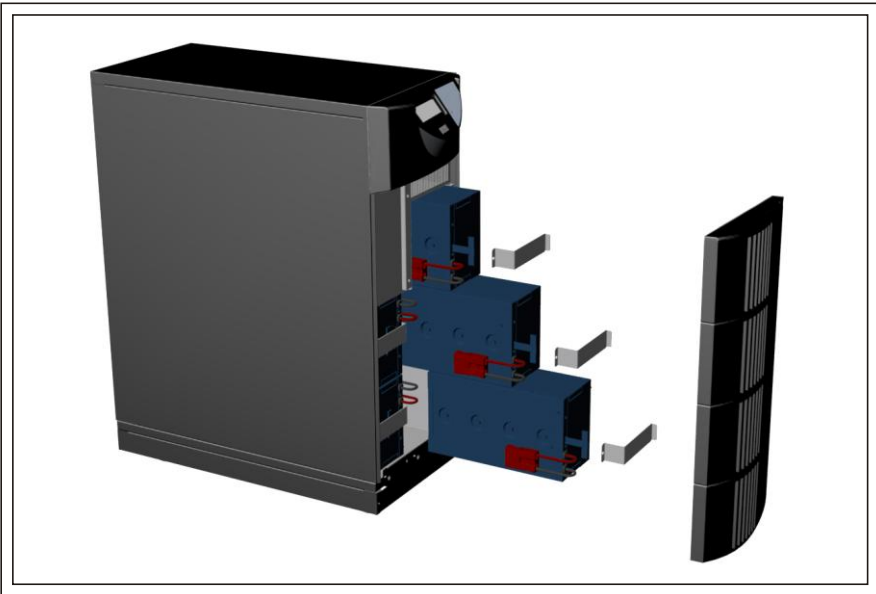

8. Specifications

Tower Models	SC60021T	SC60022T	SC80021T	SC80022T	SC11021T	SC11022T
--------------	----------	----------	----------	----------	----------	----------

INPUT

Voltage Range	160 -280Vac
Frequency	45 ~ 65 Hz
Phase/Wire	Single, Line + Common + Ground
Power Factor	Up to 0.99 at 100% Linear Load
Current THD	<5% at 100% Linear Load

OUTPUT

Voltage (SCxxx21T Models) (SCxxx22T Models)	120/208/240Vac 208/220/230/240Vac Selectable		
Voltage Adjustment	+/- 0%; +/- 1%; +/- 2%; +/- 3%		
Voltage Regulation	+/- 2%		
Capacity	6000VA/4200W	8000VA/5600W	10000VA/7000W
Rated Power Factor	0.7 Lagging		
Wave Form	Sine Wave, THD < 3% (no load to full load)		
Frequency Stability	+/- 0.2% (Free Running)		
Frequency Regulation	+/- 1Hz		
Transfer Time	0ms		
Crest Factor	3:1		
Efficiency (AC to AC Nominal)	91%		
Efficiency (AC to AC ECO Mode)	Up to 97%	Up to 93%	
Leakage Current	< 3mA @ Full Load		
Manual Bypass Switch	Make – Before - Break		
DC Start	Yes		
Cooling	Variable Speed Fans (load determines speed)		

DISPLAY, ALARMS, DIAGNOSTICS & COMMUNICATIONS

Status On LED + LCD	Line Mode, Backup Mode, ECO Mode, Bypass Supply, Battery Low, Battery Bad/Disconnected, Overload, Transferring with interruption & UPS Fault
Readings On LED + LCD	Input Voltage, Input Frequency, Output Voltage, Output Frequency, Load Percentage, Battery Voltage & Units Inner Temperature
Self-Diagnostics	Upon Power –on, Front Panel Setting & Software Control, 24 Hour self check
Audible Alarms and Visual	Line Failure, Battery Low, Transfer to Bypass, System Fault Conditions
Communications	RS232 Serial Port (2 slots available for optional SNMP/WEB, USB or Dry Contact Card)

PHYSICAL

Input Connection	Hardwire and Cord with L6-30P Plug (Selectable)	Hardwire	
Output Connection	Hardwire		
Dimensions (H x W x D)	29.5" x 11.4" x 25.4"	34.7" x 11.4" x 25.4"*	34.7" x 11.4" x 25.4"*
Weight (lbs.)	21T / 265 22T / 190	21T / 320 22T / 203	21T / 340 22T / 223
Listing	UL1778; cUL; CE – FCC Class A		

***Height is 29.5" on units without transformers (22T)**

INTERNAL BATTERY

Battery Run Time @ Full Load	8	7	5
Type	Sealed Lead Acid Maintenance Free, 20 each 12V/7AH, 240Vdc	Sealed Lead Acid Maintenance Free, 20 each 12V/9AH, 240Vdc	Sealed Lead Acid Maintenance Free, 20 each 12V/9AH, 240Vdc
Hot – Swap Batteries	Yes		
Recharge Time	4 hours to 90%	5 hours to 80%	
*Extended Run Time Battery Cabinets	SC-BP6000T-2, SC-BP6000T-3, SC-BP1100T-2, SC-BP1100T-3 (Refer To Run Time Chart)		

COMMUNICATION Cards and Shutdown Software (Optional)

SC-SNMP1	SNMP/WEB Network Card and Shutdown Software
SC-Contact/EPO	Dry Contact & EPO Card
SC-PK*	Parallel Cable kit contains two RJ45 cables and miscellaneous hardware for paralleling

Note: (2) slots available; both cards can be used simultaneously; RS232 Port is disabled when communication cards are installed.

*- Required when using multiple UPS modules in a parallel configuration

EXTERNAL EXTENDED BATTERY CABINETS (Optional)

Model	SC-BP6000T-2 & -3	SC-BP1100T-2 & -3
Type	Sealed Lead Acid Maintenance Free, -2: 40 each & -3: 60 each 12V/9AH, 240Vdc	Sealed Lead Acid Maintenance Free, -2: 40 each & -3: 60 each 12V/9AH, 240Vdc
Hot – Swap Cabinets	Yes	
Battery Connection	Connector	
Dimensions (H x W x D)	29.5" x 11.4" x 25.4"	
Weight (lbs.)	326	

EXTERNAL BATTERY CABINET CHARGER (Optional)

SC-CHG-1000	1000W External Mount Battery Charger (1) charger per every (2) External Battery Packs Required	6.6"W x 11.1"D x 3.4"H	7 lbs.
-------------	--	------------------------	--------

Note: (1) External Battery Charger (P/N SC-CHG-1000) required for every (2) Extended Battery Cabinets

*PARALLEL DISTRIBUTION/BYPASS MODULE (4 Units maximum)

SC-PKIT-2	Bypass Two (2)-6kVA units or One (1)-(8 or 10kVA) unit 60 Amp	10.5"W x 9.5"D x 3.7"H	11 lbs.
SC-PKIT-4	Bypass Four (4)-6kVA units or Two (2)-(8 or 10kVA) unit 120 Amp	10.5"W x 16.4"D x 3.7"H	20 lbs.
SC-PKIT-4200	Bypass Four (4)-(8 or 10kVA) units 200A	10.5"W x 16.4"D x 3.7"H	23 lbs.

*Parallel for capacity configurations can use (1) battery system sized for the ultimate capacity.

* Parallel for redundancy configurations require (1) battery system for each UPS.

Staco Energy Products Co.
301 Gaddis Blvd.
Dayton, OH 45403
US Toll Free: 866.261.1191
Fax: 937.253.1723
www.stacoenergy.com